

LETECH ROOF RACK FROM 2018

INSTALLATION INSTRUCTIONS

LAST UPDATE 2026	VEHICLE TYPE G-CLASS FROM 2018
---------------------	-----------------------------------

MADE IN GERMANY



TABLE OF CONTENTS

1. General	3
1.1 Safety instructions	3
1.2 Scope of delivery	4
2. Assembly	5
3. Loading of the roof rack.	8

1. GENERAL

Thank you for purchasing a LETECH quality product. Through state-of-the-art production facilities, constant checks and regulated processes, we ensure that only flawless products leave our production.

1.1 SAFETY INSTRUCTIONS

Work on the vehicle may only be carried out by trained specialists.

Work on the vehicle electrical system may only be carried out by specialists with appropriate electrical and electronic knowledge.

Before working on the vehicle electrical system, disconnect the battery.

Use suitable hoists and tools when preparing and assembling the LETECH roof rack.

In general, the safety requirements of the respective workshop or country must be observed.

1.2 SCOPE OF DELIVERY

Roof rack

(1x)

Hammer screws with
spacer sleeve



(6x)

2. ASSEMBLY




Remove any covers on the vehicle roof to access the roof rack mounting points.

2. ASSEMBLY

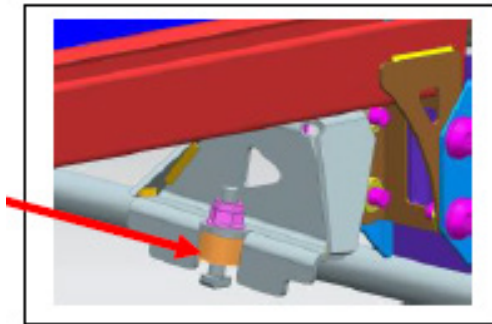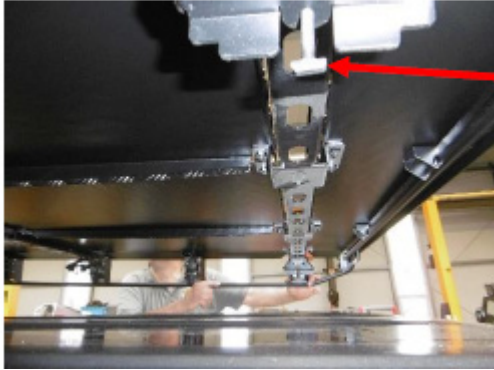

<p>Roof rack (1x)</p>	<p>Insert the mounting screws (hammer-head screws with spacer sleeves) into the roof rack brackets. Position the roof rack over the vehicle roof using appropriate lifting equipment.</p> <p>Follow all regulations regarding suspended loads. Protect your head.</p>
<p>Hammer screws with spacer sleeve (6x)</p>	


2. ASSEMBLY

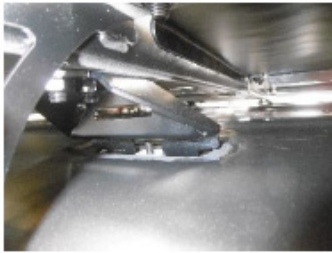

Insert the roof racks into the roof recesses and lightly tighten the nuts on the hammer bolts.
Tighten the hammer bolts to 10 Nm.

3. LOADING OF THE ROOF RACK

Do not walk on the roof rack! Risk of falling!
The roof rack may only be loaded as shown in the following image!

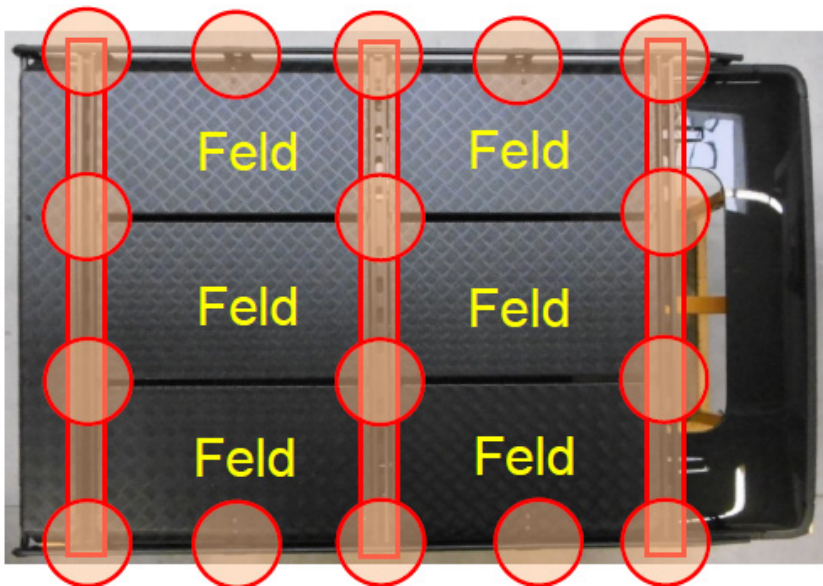

A load of **120 kg** is permitted in the areas marked in red.
Load capacity: **50 kg** per section. (yellow sections)

For the maximum possible total load, see the vehicle owner's manual (roof load).