

LETECH UNDERRIDE GUARD SYSTEM FROM 2018

INSTALLATION INSTRUCTIONS

LAST UPDATE 2025	VEHICLE TYPE GRENADIER
---------------------	---------------------------

MADE IN GERMANY



LETECH

TABLE OF CONTENTS

1. General	3
1.1 Safety instructions	3
1.2 Scope of delivery	4
2. Assembly	5

1. GENERAL

Thank you for purchasing a LETECH quality product. Through state-of-the-art production facilities, constant checks and regulated processes, we ensure that only flawless products leave our production.

1.1 SAFETY INSTRUCTIONS

Work on the vehicle may only be carried out by trained specialists.

Work on the vehicle electrical system may only be carried out by specialists with appropriate electrical and electronic knowledge.

Before working on the vehicle electrical system, disconnect the battery.

Use suitable hoists and tools when preparing and assembling the LETECH underride guard system.

In general, the safety requirements of the respective workshop or country must be observed.

1.2 SCOPE OF DELIVERY

Tank guard

(1x)

Transfer case protection

(1x)

M8x16 hexagon head screw

(24x)

Klipko cage nut M8

(18x)


Hexagon screw with flange M8x25

(2x)

Rivet nut M8

(6x)

2. ASSEMBLY

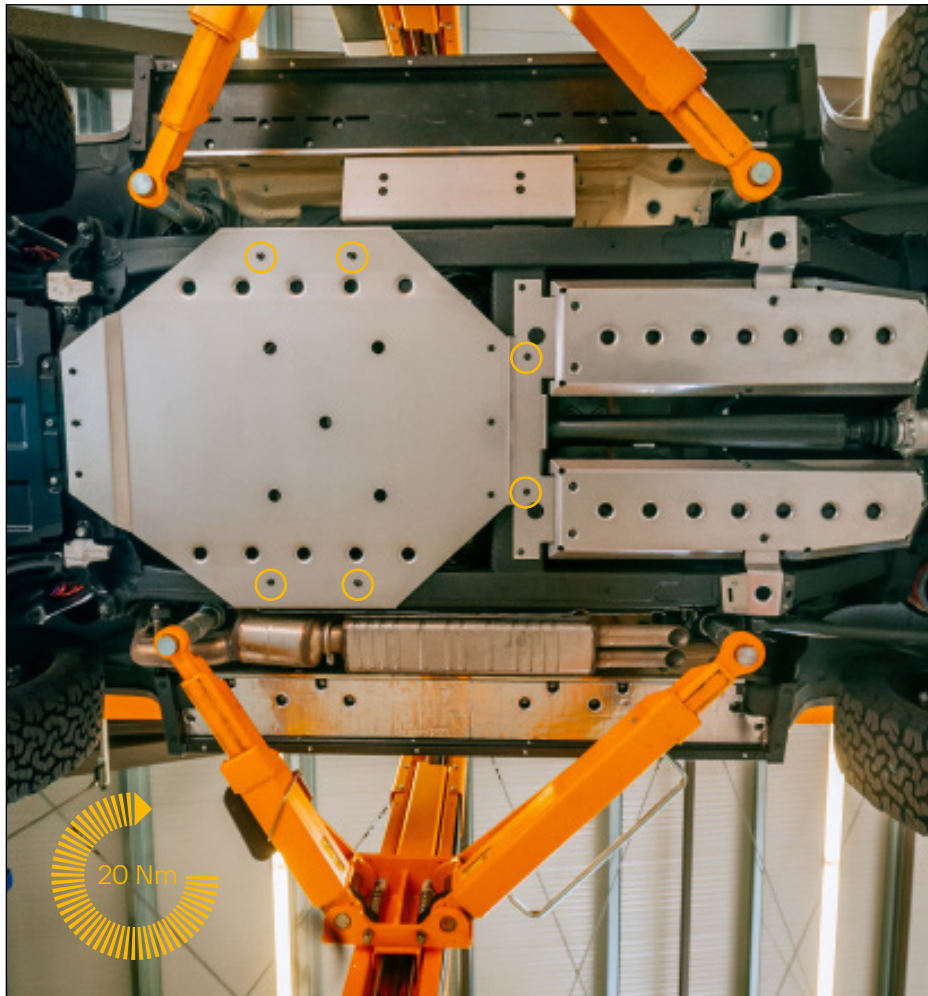

Insert Rivet nut M8 at the marked points.