

INSTALLATION INSTRUCTIONS

LAST UPDATE 2025	VEHICLE TYPE GRENADIER
---------------------	---------------------------

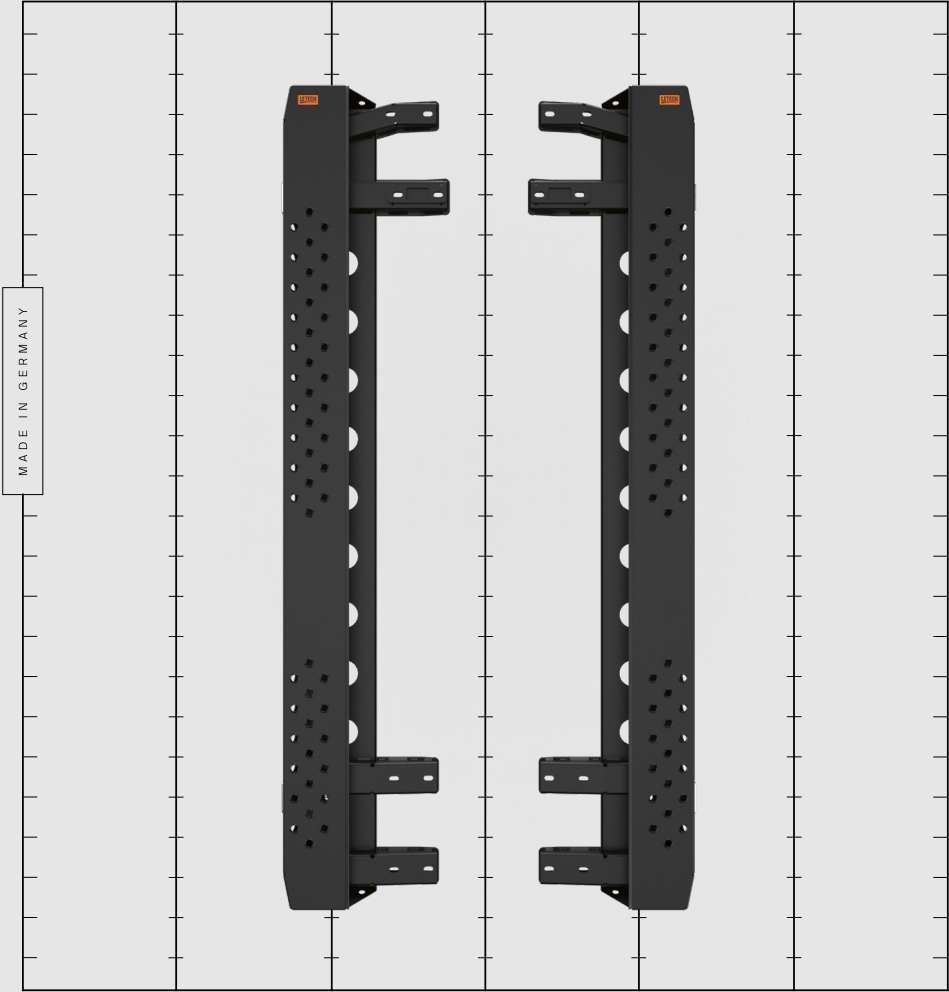


TABLE OF CONTENTS

1. General. 3

1.1 Safety instructions 3

1.2 Scope of delivery 4

2. Assembly 5

1. GENERAL

Thank you for purchasing a LETECH quality product. Through state-of-the-art production facilities, constant checks and regulated processes, we ensure that only flawless products leave our production.

1.1 SAFETY INSTRUCTIONS

Work on the vehicle may only be carried out by trained specialists.

Work on the vehicle electrical system may only be carried out by specialists with appropriate electrical and electronic knowledge.


Before working on the vehicle electrical system, disconnect the battery.

Use suitable hoists and tools when preparing and assembling the LETECH offroad running boards.


In general, the safety requirements of the respective workshop or country must be observed.

1.2 SCOPE OF DELIVERY


Screw M10x30
(16x)

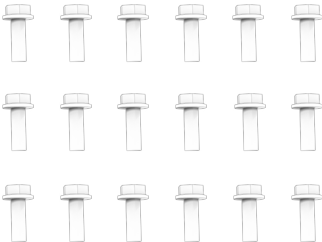

LETECH offroad running board (le/ri)
(2x)

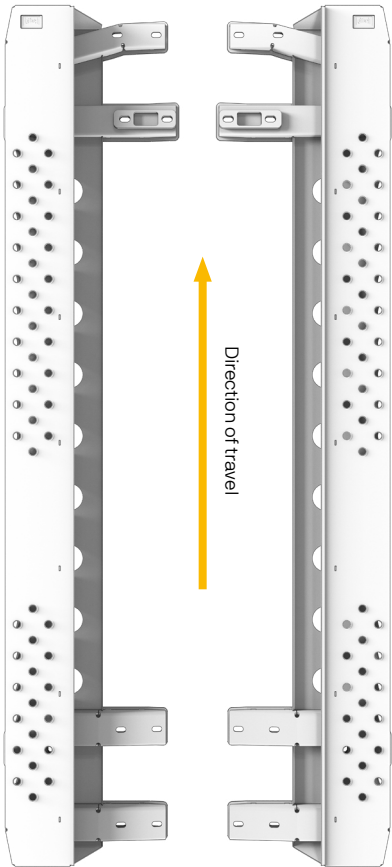


2. ASSEMBLY

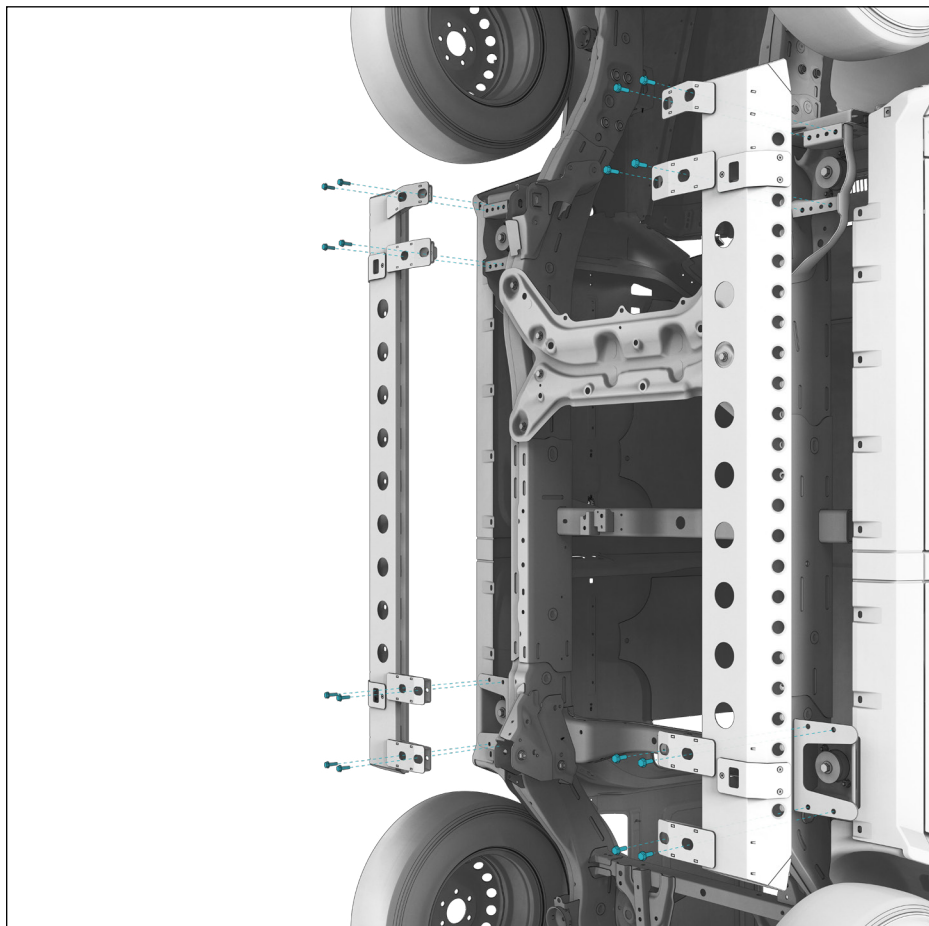

Screw M10x30
(16x)

Place the LETECH offroad running boards with the 16x M10x30 screws. The LETECH logo is located at the front in the direction of travel. A 1/2" ratchet with extension and 16 spanner attachment can serve as a tool.

2. ASSEMBLY

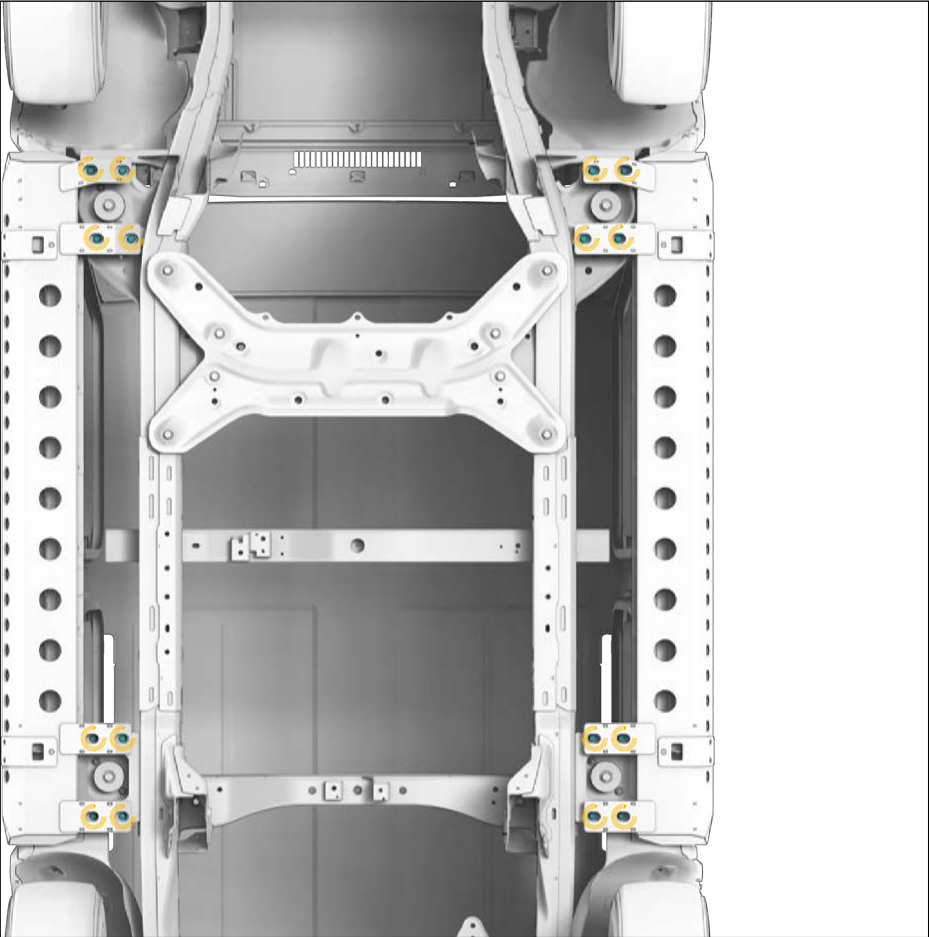

Using a suitable torque wrench, tighten the 16x M10x30 screws to 45 Nm.