

INSTALLATION INSTRUCTIONS

LAST UPDATE 2026	VEHICLE TYPE G-CLASS
---------------------	-------------------------

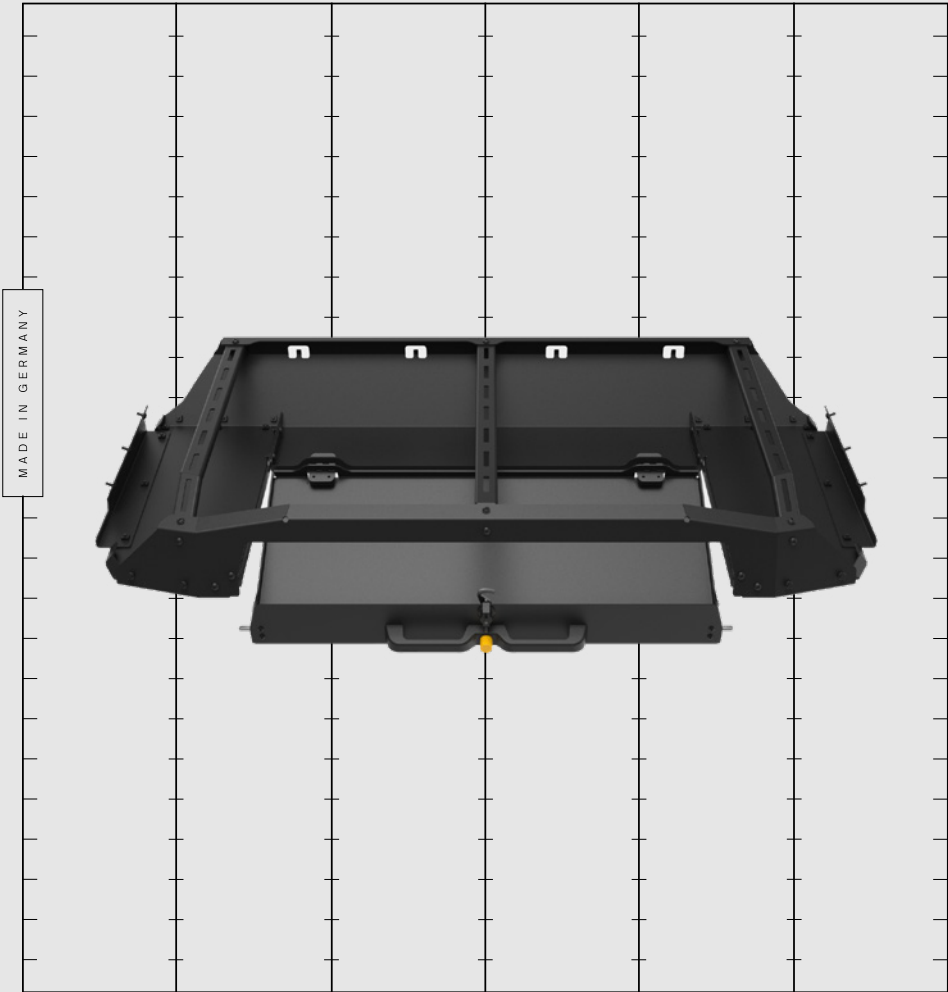


TABLE OF CONTENTS

- 1. General.** 3
 - 1.1 Safety instructions 3
 - 1.2 Scope of delivery 4
 - 1.3 Safety Instructions for Installation and Use 5

- 2. Installation** 6
 - 2.1 Vehicle Preparation and Work Instructions 6
 - 2.2 Installation Roof Storage Compartment 7
 - 2.2.1 Dismantling work 7
 - 2.2.2 Mounting bracket 11
 - 2.2.3 Finishing of Trim Panels 17
 - 2.2.4 Installation Safety Cables 20
 - 2.2.5 Mounting Roof storage compartment 21
 - 2.3 Final Tasks 22

1. GENERAL

Thank you for purchasing a LETECH quality product. Through state-of-the-art production facilities, constant checks and regulated processes, we ensure that only flawless products leave our production.

1.1 SAFETY INSTRUCTIONS

Work on the vehicle may only be performed by trained professionals. Work on the vehicle's electrical system may only be performed by qualified technicians with appropriate knowledge of electrical and electronic systems. Disconnect the battery before performing any work on the vehicle's electrical system.

A second person should assist when securing the roof storage compartment.

In general, the safety regulations of the respective repair shop or state must be followed.

1.2 SCOPE OF DELIVERY

Roof storage compartment (1x)
with Brackets (4x) and mounting
hardware and safety cables/open-
ing limiter (2x)



Trimming template

(1x)
(The trim template is used to adjust the
interior trim above the side windows in
the cargo area.)

M6 x 20 hex head screw
(4x)



M6 Socket Nut
(10x)




4x10 Rivet
(2x)



M6x16 Torx pan-head screw
(12x)



Key and spare key
for the roof storage compartment
(each 1x)

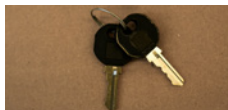

Side bracket
(2x)



1.3 SAFETY INSTRUCTIONS FOR INSTALLATION AND USE

- During installation, make sure that the retaining cables for the roof storage compartment lid do not get caught when closing.
- A second person may be needed to assist with the installation of the roof storage compartment.
- The roof storage compartment may be loaded with a maximum of 30 kg.
- When loading, make sure that objects cannot fall out or down.
- When opening the roof storage compartment lid, make sure that no objects fall out.
- The safety cables of the roof storage compartment lid should be checked regularly for damage.

2. INSTALLATION

2.1 VEHICLE PREPARATION AND WORK INSTRUCTIONS

- Fold down the rear seat.
- Cover the trunk floor.
- Cover the side panels below the trunk window.
- Be careful not to damage the headliner or attached parts when drilling.
- Vacuum up the wood shavings.
- Removing the trim panels:
Follow the Mercedes-Benz installation instructions!

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.1. DISMANTLING WORK



Loosen the right and left C-pillar trim panels.
Carefully remove the airbag cover. Remove the screw behind the airbag cover.

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.1. DISMANTLING WORK



Remove the trim above the trunk windows on the right and left.

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.1. DISMANTLING WORK



Remove the trim panels on the right and left sides of the rear door.

If speakers are installed, after removing the door seal from the back, push the speaker cover out.

Remove the screw under the speaker cover.

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.1. DISMANTLING WORK



Brackets
(4x)

Remove all brackets from the overhead storage compartment. (The removed brackets are needed to mark the drill holes in the body.)

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.2. MOUNTING BRACKET



Side bracket (2x)	First, install the brackets above the side trunk windows on the left and right. Secure each bracket with 2 mounting bolts to the existing holes in the body or the holes for the clips, and mark the slotted holes. You may need a second person to help mark the holes.
Fixing bolts (4x)	

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.2. MOUNTING BRACKET



Side bracket (2x)	Cover the vehicle interior. Drill holes in the center of the marked slots, 9 mm, pre-drill. Vacuum up the chips; be careful not to damage the head-liner! Rivet the supplied socket nuts on both sides (3 per side). Install the side brackets and hand-tighten the pan-head screws (3 per side).
M6 Socket Nut (6x)	
M6x16 Torx pan-head screw (6x)	

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.2. MOUNTING BRACKET



Side bracket (2x)	Secure the roof storage compartment to both side brackets (a second person is needed). Align the roof storage compartment so that it fits snugly, then tighten the pan-head screws (3 on each side) to prevent the roof storage compartment from shifting.
M6x16 Torx pan-head screw (6x)	

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.2. MOUNTING BRACKET



Rear bracket (2x)	Install both brackets on the rear left and right sides of the overhead compartment.
M6 x 20 hex head screw (2x)	

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.2. MOUNTING BRACKET



Rear bracket (2x)	After installing the rear brackets on the roof storage compartment, mark the drilling holes on the body for securing the brackets. After marking the drilling holes (on both sides), remove the rear brackets and the roof storage compartment (a second person is needed).
Roof storage compartment (1x)	

2.2 INSTALLATION ROOF STORAGE COMPARTMENT


2.2.2. MOUNTING BRACKET



M6 Socket Nut (4x)	Drill 9-mm holes (pre-drill, remove chips with a vacuum). Rivet in the rivet nuts provided. Reinstall the bracket at the rear on both sides and tighten the screws.
M6 x 20 hex head screw (2x)	

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.3. FINISHING OF TRIM PANELS

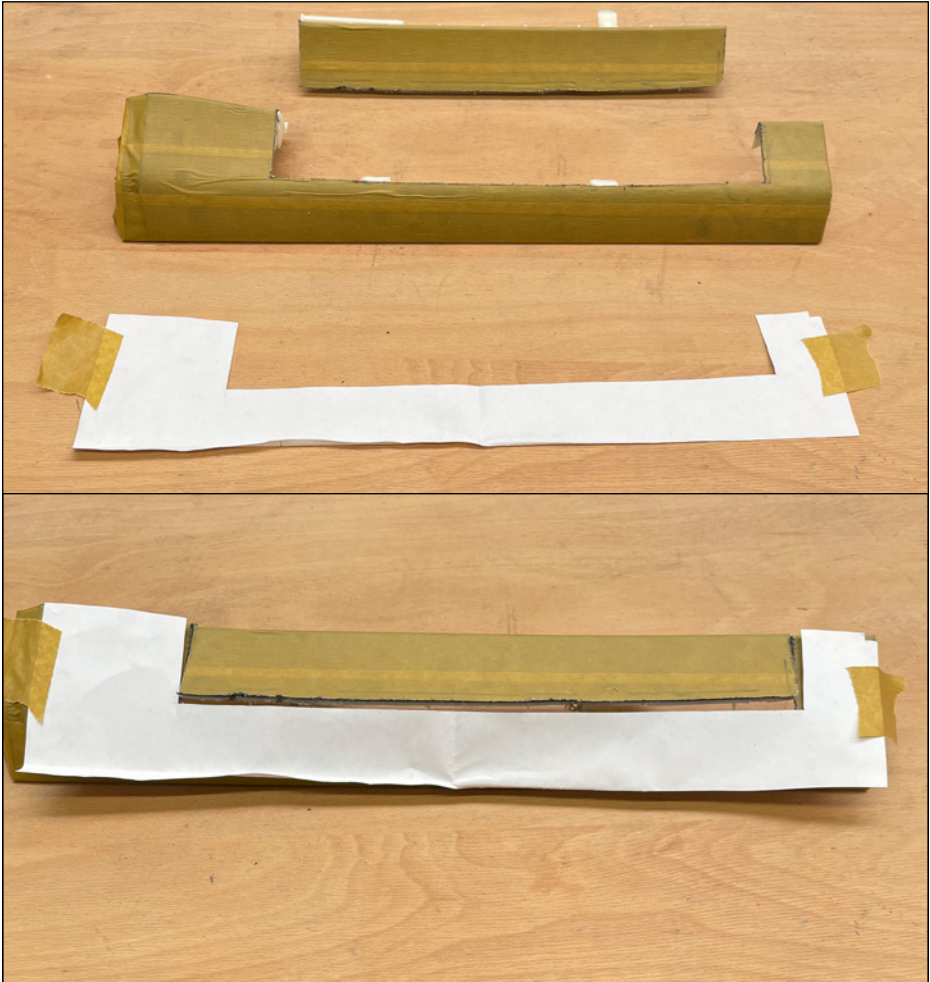

Trimming template
(1x)

Cut out the trim template for trimming the interior trim around the trunk window. Secure the trim template to the trim. The trim template is used on both sides, but in a mirrored orientation.

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.3. FINISHING OF TRIM PANELS



Mark the cut line and cut it out with a suitable saw.

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.3. FINISHING OF TRIM PANELS



Check the fit of the trim and adjust as necessary.
Install all trim pieces.

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.4. INSTALLATION SAFETY CABLES



4x10 Rivet (2x)	Attach the safety cables/opening limiters before final installation of the overhead storage compartment using the rivets provided. See the illustration for cable installation (top side: rivet from the inside out; bottom side [lid]: from the outside in). Make sure they cannot get caught between the flap and the overhead storage compartment.
Safety cables/opening limiter (2x)	

2.2 INSTALLATION ROOF STORAGE COMPARTMENT

2.2.5. MOUNTING



Install, align, and secure the roof storage compartment with the help of a second person; tighten the screws.

2.3 FINAL TASKS

- ☐ Check the clearances.
- ☐ Check the fit of the roof storage compartment.
- ☐ Check that the roof storage compartment flap opens and closes freely.
- ☐ Check that the safety cables/opening limiters are not pinched.
- ☐ Check that the screws are tightened properly.
- ☐ Check the closing function.
- ☐ Clean everything.
- ☐ Perform a test drive.